



A 机壳分组件 Machine frame&miscellaneous cover components

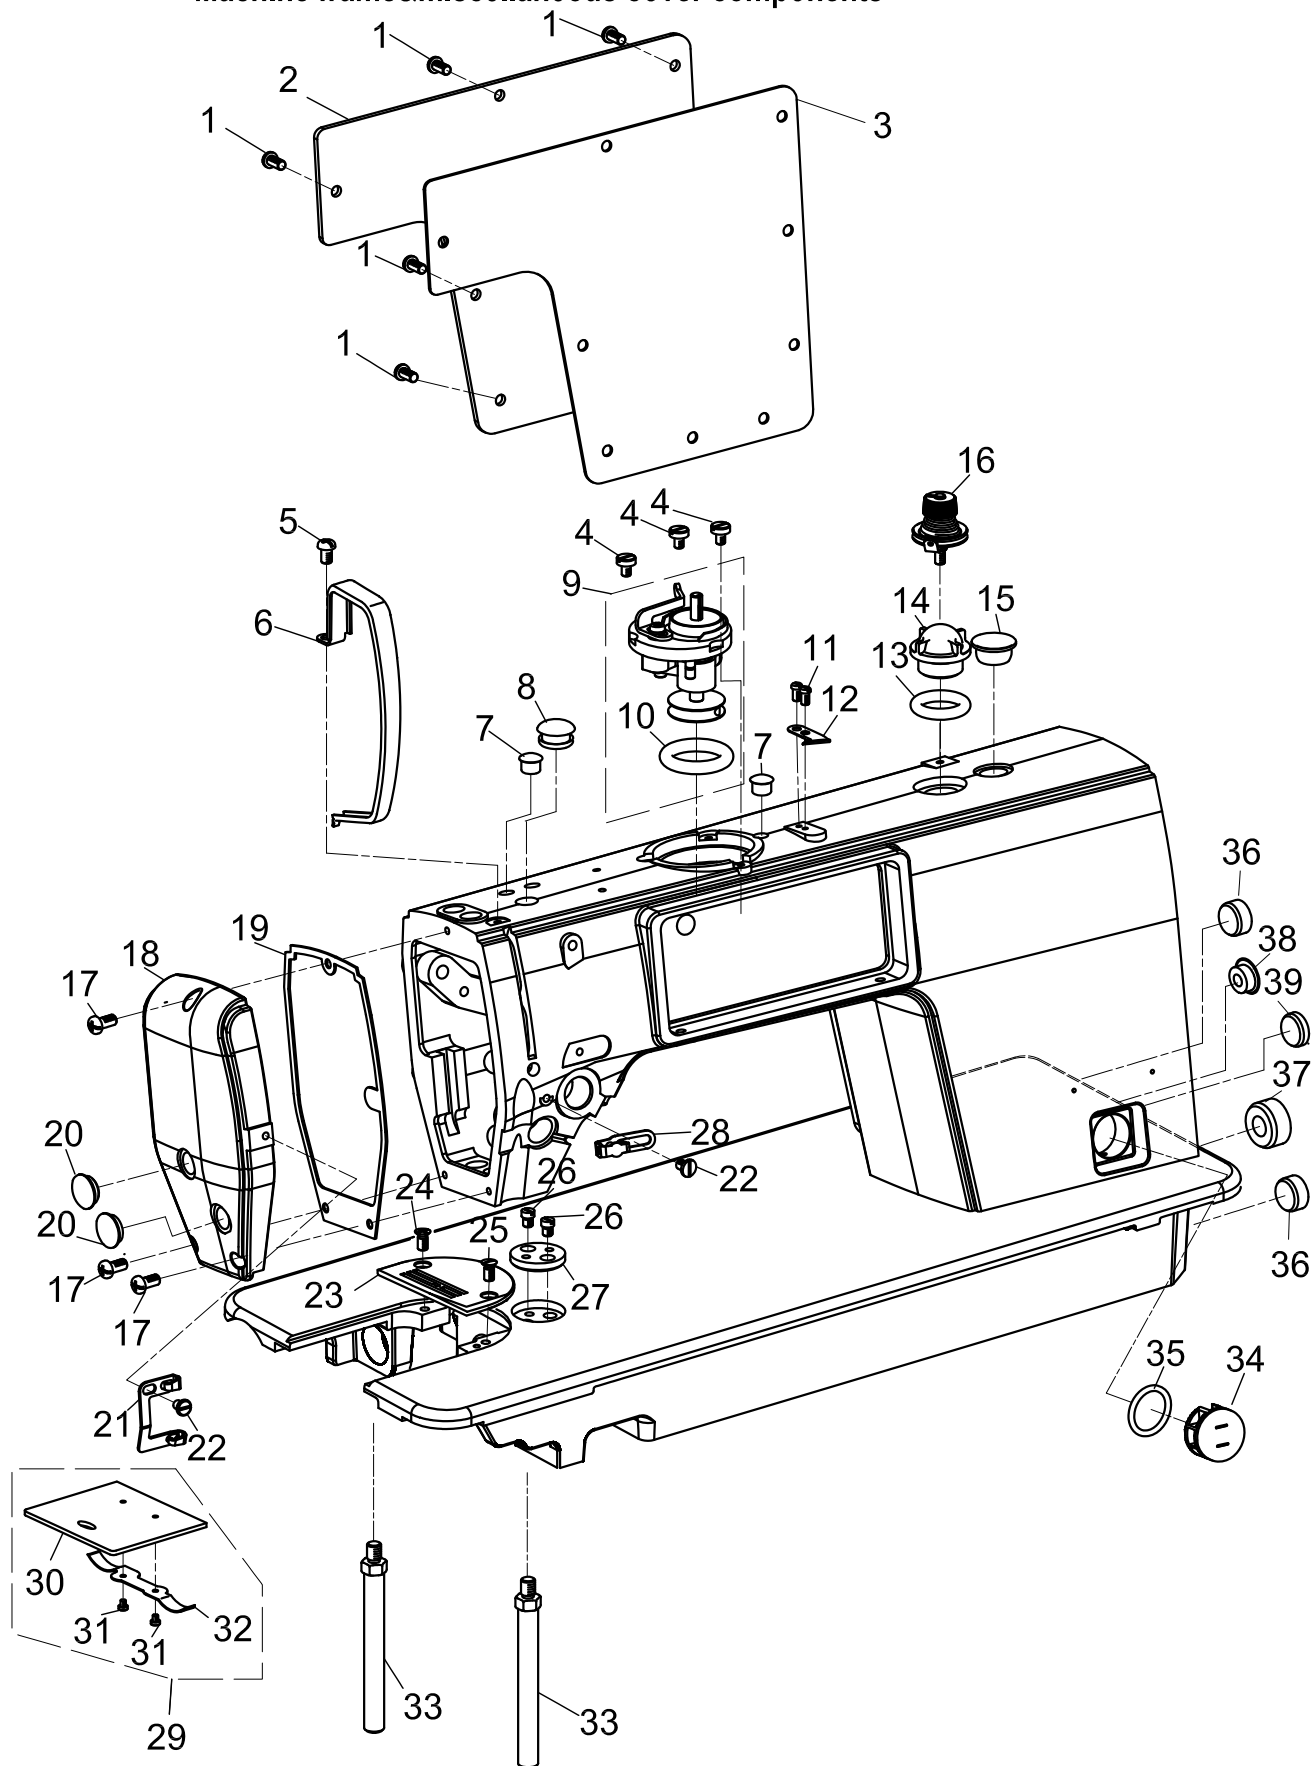

A. 机壳分组件 /Machine frame&miscellaneous cover components

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注	补给标记
1	10008972	9	螺钉	SCREW		1
2	20025554	1	后窗板	SIDE PLATE		1
3	10066775	1	后窗板垫	SIDE PLATE GASKET		1
4	10004380	3	螺钉	SCREW		1
5	10008934	1	螺钉	SCREW		1
6	10007101	1	挑线杆护罩	THREAD TAKE-UP LEVER COVER		1
7	10008942	2	橡胶塞	RUBBER PLUG		1
8	10008943	1	橡胶塞	RUBBER PLUG		1
9	100003517	1	绕线器	BOBBIN WIDER ASM		1
10	100003456	1	橡胶轮	RUBBER RING		1
11	10050423	2	螺钉	SCREW		1
12	10011149	1	绕线切刀	THREAD CUTTER		1
13	100003455	1	O形圈	O-RING		1
14	100003431	1	油窗	OIL WINDOW		1
15	10009576	1	橡胶塞	RUBBER PLUG		1
16	10051431	1	绕线夹线器组件	BOBBIN THREAD TENSION ASM		1
17	10008972	3	螺钉	SCREW		1
18	200002631	1	面板	FACE PLATE		1
19	100010327	1	面板垫	FACE PLATE GASKET		1
20	10008977	2	橡胶塞	RUBBER PLUG		1
21	100003235	1	左线钩	ARM THREAD GUIDE LEFT		1
22	10008973	2	螺钉	SCREW		1
23+	10060708	1	针板	NEEDLE PLATE		1
23+	10014459	1	针板	NEEDLE PLATE	H	1
24	10012463	1	螺钉	SCREW FLAT		1
25	10009005	1	螺钉	SCREW FLAT		1
26	10004374	2	螺钉	SCREW		1
27	10004373	1	限位挡片	RULER PLATE		1
28	10008940	1	右线钩	ARM THREAD GUIDE RIGHT		1
29	10013706	1	推板部件	SIDE PLATE ASM		1
30	10003960	1	推板	SIDE PLATE		1
31	10010080	2	螺钉	SCREW		1
32	10003963	1	推板簧	SPRING OF SIDE		1
33	100002530	2	底板支柱	BED SCREW STUD		1
34	100003431	1	油窗	OIL WINDOW		1
35	100005534	1	O形圈	O-RING		1
36	100009026	2	橡皮塞	FEEDING SHAFT HOLE PLUG		1
37	100003427	1	橡胶塞	RUBBER PLUG		1
38	100003054	1	橡胶塞	RUBBER PLUG		1
39	100009048	1	橡胶塞	RUBBER PLUG		1

B 上轴、挑线分组件 Main shaft&thread take-up components

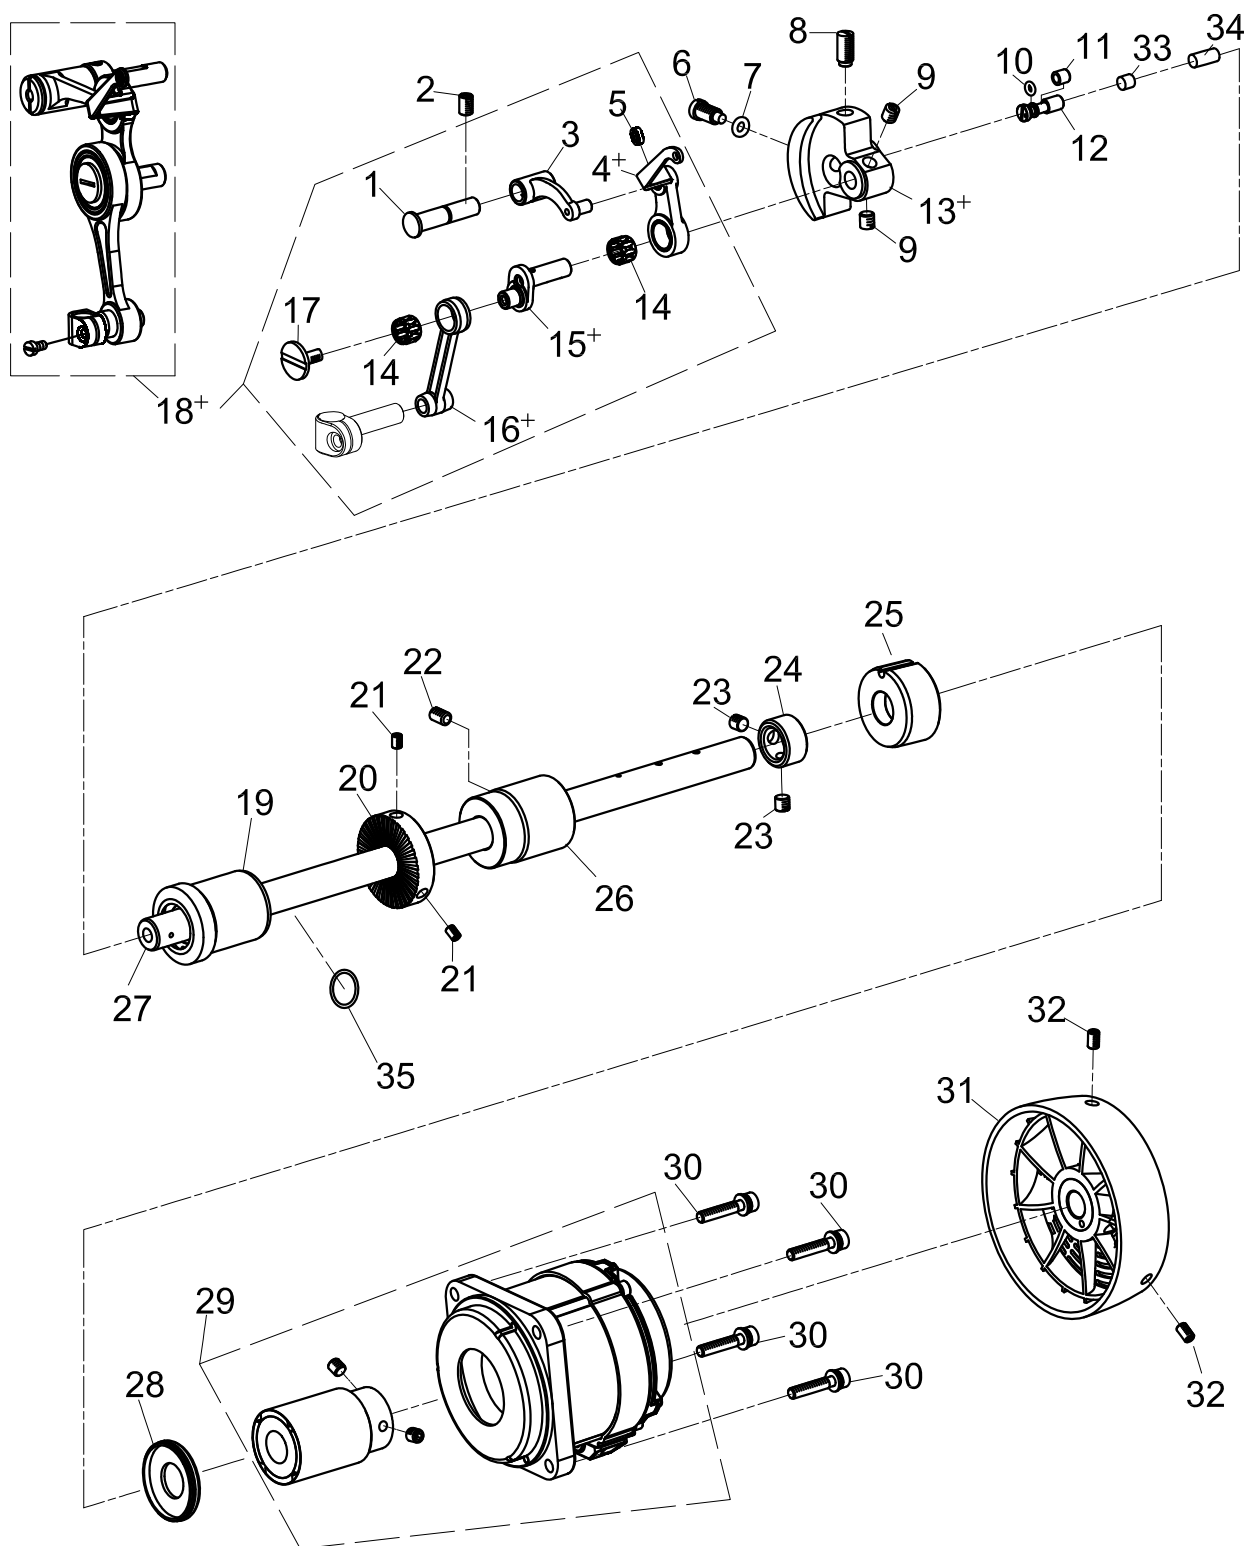


B. 上轴、挑线分组件 / Main shaft&thread take-up components

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注
1	10050672	1	挑线连杆销	THREAD TAKE-UP CRANK SHAFT	H
2	10010083	1	螺钉	SET SCREW SOCKET	
3	10010535	1	挑线连杆	THREAD TAKE-UP BAR	
4+	10004158	1	挑线杆分部件	THREAD TAKE-UP LEVER ASM	
4+	10004158	1	挑线杆分部件	THREAD TAKE-UP LEVER ASM	H
	10004161	1	挑线杆过线套		
5	100003440	1	挑线杆防油圈	OIL RESISTANT COVER	
6	10010545	1	螺钉	SCREW	
7	100003438	1	O形圈	O-RING	H
8	10010082	1	螺钉	SET SCREW SOCKET	
9	10010065	2	螺钉	SET SCREW SOCKET	
10	10010538	1	O形圈	O-RING	
11	100003439	1	曲柄油量调节销套	SLEEVE OF ADJUSTING PIN	H
12	10010504	1	销	PIN	
13+	10012203	1	针杆曲柄	COUNTER WEIGHT	
13+	10012858	1	针杆曲柄	COUNTER WEIGHT	
13+	100008957	1	针杆曲柄	COUNTER WEIGHT	W2
14	10014106	2	轴承	BEARING	
	10014107	2	K8×12×7.8轴承		
15+	10006844	1	挑线曲柄	NEEDLE BAR CRANK	
16+	10053104	1	针杆连杆	NEEDLE BAR CRANK ROD	H
15+	10005940	1	挑线曲柄	NEEDLE BAR CRANK	
15+	100006121	1	挑线曲柄	NEEDLE BAR CRANK	
16+	100006125	1	针杆连杆	NEEDLE BAR CRANK ROD	
	10010508		挑线杆		H
	10005791		挑线杆		
17	10010537	1	螺钉	SCREW	
	10004160	1	挑线曲柄油塞		
18+	100003513	1	挑线杆组件	TAKE-UP BAR ASSEMBLY	H
18+	100003703	1	挑线杆组件	TAKE-UP BAR ASSEMBLY	
18+	100008193	1	挑线杆组件	TAKE-UP BAR ASSEMBLY	
19	10004159	1	轴套	BEARING SUPPORT	
20	10004472	1	绕线主动轮	WHEEL	H
21	10010678	2	螺钉	SET SCREW SOCKET	
22	10010678	1	螺钉	SET SCREW SOCKET	
23	10005020	2	螺钉	SET SCREW SOCKET	
24	10010542	1	挡圈	THRUST COLLAR	H
25	100003698	1	上轴套后套	BEARING SUPPORT	
26	10004145	1	轴套	BEARING SUPPORT	
27	100012064	1	上轴	MAIN SHAFT	
28	100002521	1	上轴后套油封	OIL SEAL	H
29	100009911	1	主轴电机	MOTOR	
30	100001396	4	螺栓(带垫圈)	BOLT SOCKET(WASHER)	
31	100004946	1	上轮	UPPER WHEEL	
32	10011232	2	螺钉	SET SCREW SOCKET	H
33	10066835	1	毛毡	FELT	
34	100005666	1	毛毡	FELT	
35	10008886	1	O形圈	O-RING	

C 针杆、夹线分组件


Needle bar & thread tension components

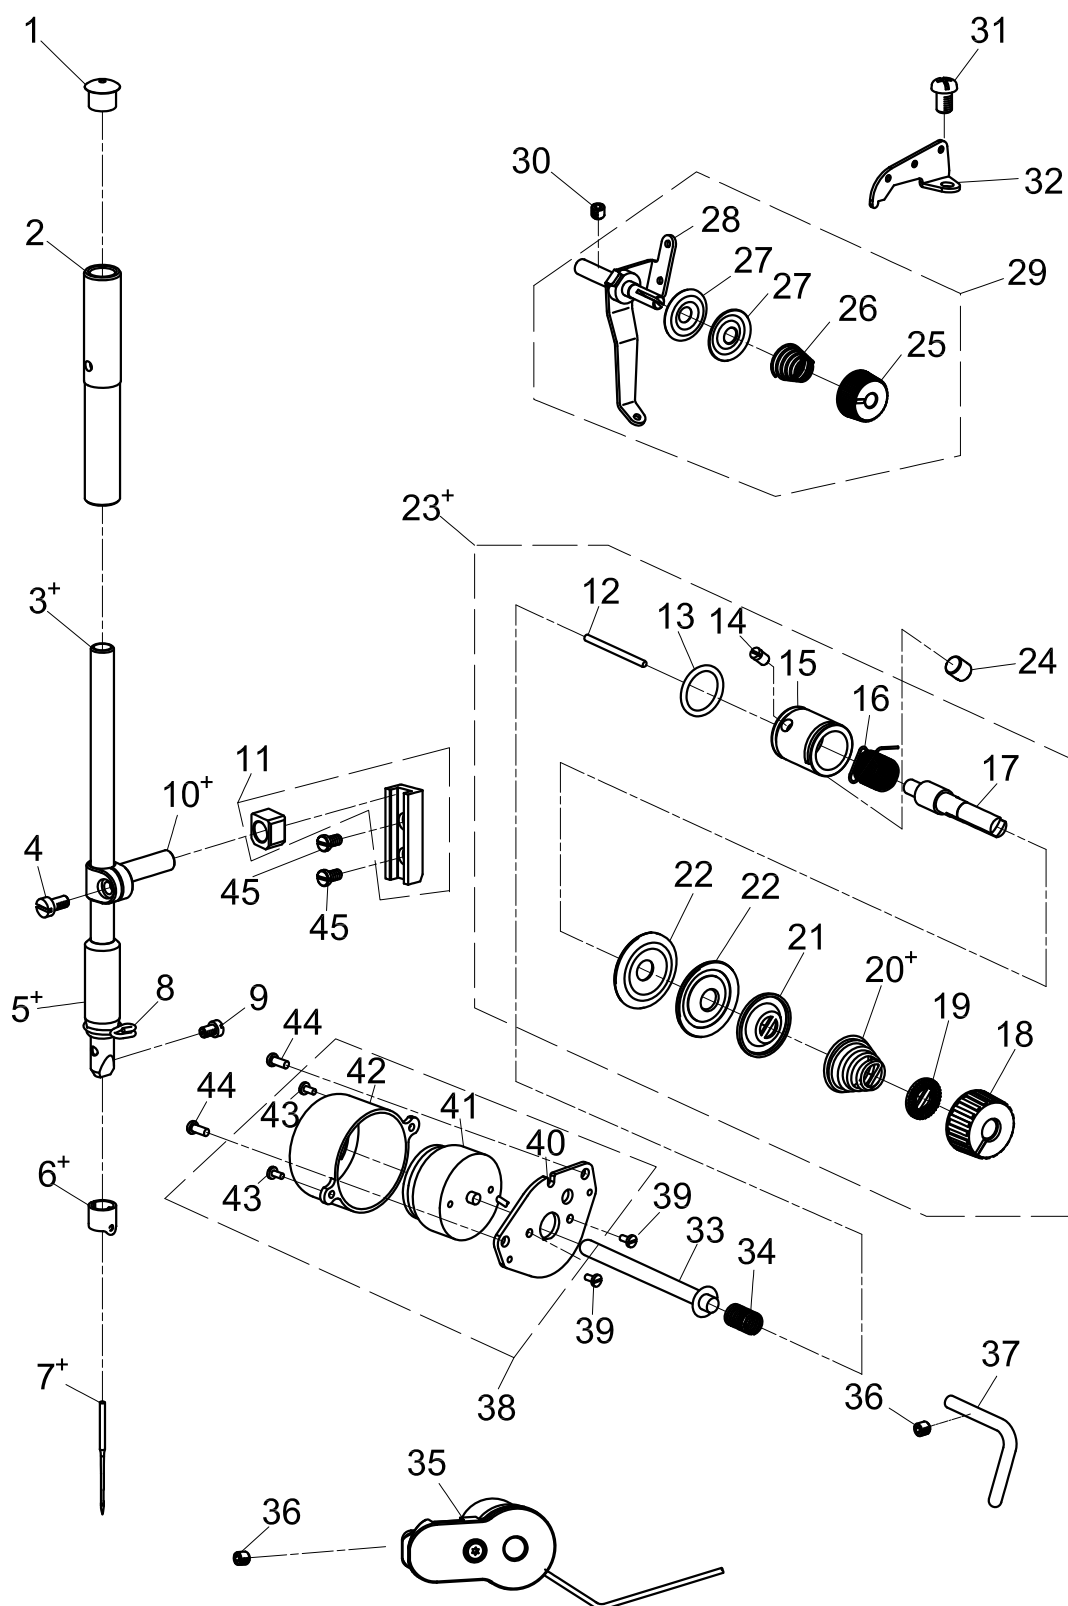

C. 针杆、夹线分组件 / Needlebar & thread tension components

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注
1	100003441	1	橡胶塞	RUBBER PLUG	
2	10011063	1	针杆轴套	BEARING SUPPORT	
3+	100003789	1	针杆	NEEDLE BAR	
3+	10041609	1	针杆	NEEDLE BAR	H
4	10043360	1	滑块导轨螺钉	SCREW	
5+	10014117	1	轴套	BEARING SUPPORT	
6+	10010591	1	针杆线钩	NEEDLE BAR THREAD GUIDE	
7+	10038939	1	DB×1 14#机针	NEEDLE DB×1 14#	
5+	10005916	1	轴套	BEARING SUPPORT	H
6+	10005945	1	针杆线钩	NEEDLE BAR THREAD GUIDE	H
7+	100003606	1	DP×5 18#机针	NEEDLE DB×5 18#	H
8	10005943	1	针杆下轴套线钩	NEEDLE BAR THREAD GUIDE	
9	10010588	1	螺钉	SCREW	
10+	10043355	1	针杆连接柱	NEEDLE BAR HOLDER	
10+	10010590	1	针杆连接柱	NEEDLE BAR HOLDER	H
11	10054140	1	滑块导轨组件	SLIDE BLOCK	
12	10004184	1	松线钉	THREAD RELEASE PIN	
13	100004183	1	O形圈	O-RING	
14	10004200	1	螺钉	SCREW	
15	10039524	1	挑线簧调节座	TENSION POST SOCKET	
16	10004201	1	弹簧	SPRING	
17	10004177	1	夹线螺杆	TENSION STUD	
18	10051457	1	松线器螺母	NUT	
19	10004199	1	夹线制动板	TENSION DISC STOPPER	
20+	10004201	1	弹簧	SPRING	
20+	10005941	1	弹簧	SPRING	H
21	10004179	1	松线板	THREAD RELEASE DISC	
22	10004180	2	夹线板	TENSION DISC HOLDER	
23+	10062637	1	夹线器组件	THREAD TAKE-UP DEVICE	
23+	100003773	1	夹线器组件	THREAD TAKE-UP DEVICE	H
24	10006264	1	螺钉	SCREW	
25	10051458	1	上夹线器螺母	NUT	
26	10005838	1	弹簧	SPRING	
27	10005839	2	上夹线板	TENSION DISC HOLDER	
28	10012589	1	上过线板	THREADING PLATE	
29	10051703	1	上夹线器部件	THREAD TAKE-UP DEVICE	
30	10041529	1	螺钉	SET SCREW SOCKET	
31	10008934	1	螺钉	SCREW	
32	10052992	1	过线板	NEEDLE TENSION GUIDE	
33	100002401	1	松线辅钉	TENSION RELEASE SUPPORTING PIN	
34	10050348	1	弹簧	SPRING	
35	100008677	1	电子夹线器	ELECTROMAGNET	
36	10009074	2	螺钉	SET SCREW SOCKET	
37	10038945	1	缓线钩	PRESSER BAR THREAD GUIDE	
38	200006954	1	松线电磁铁组件	LOOSE WIRE ELECTROMAGNET ASSEMBLY	
39	10005240	2	螺钉	SCREW	
40	100008531	1	电磁铁安装板	MOUNTING PLATE	
41	100008701	1	松线电磁铁	LOOSE WIRE ELECTROMAGNET	
42	100008532	1	电磁铁罩	ELECTROMAGNET COVER	
43	10008972	2	螺钉	SCREW	
44	10043360	2	螺钉	SCREW	

D 压料分组件 Presser bar components

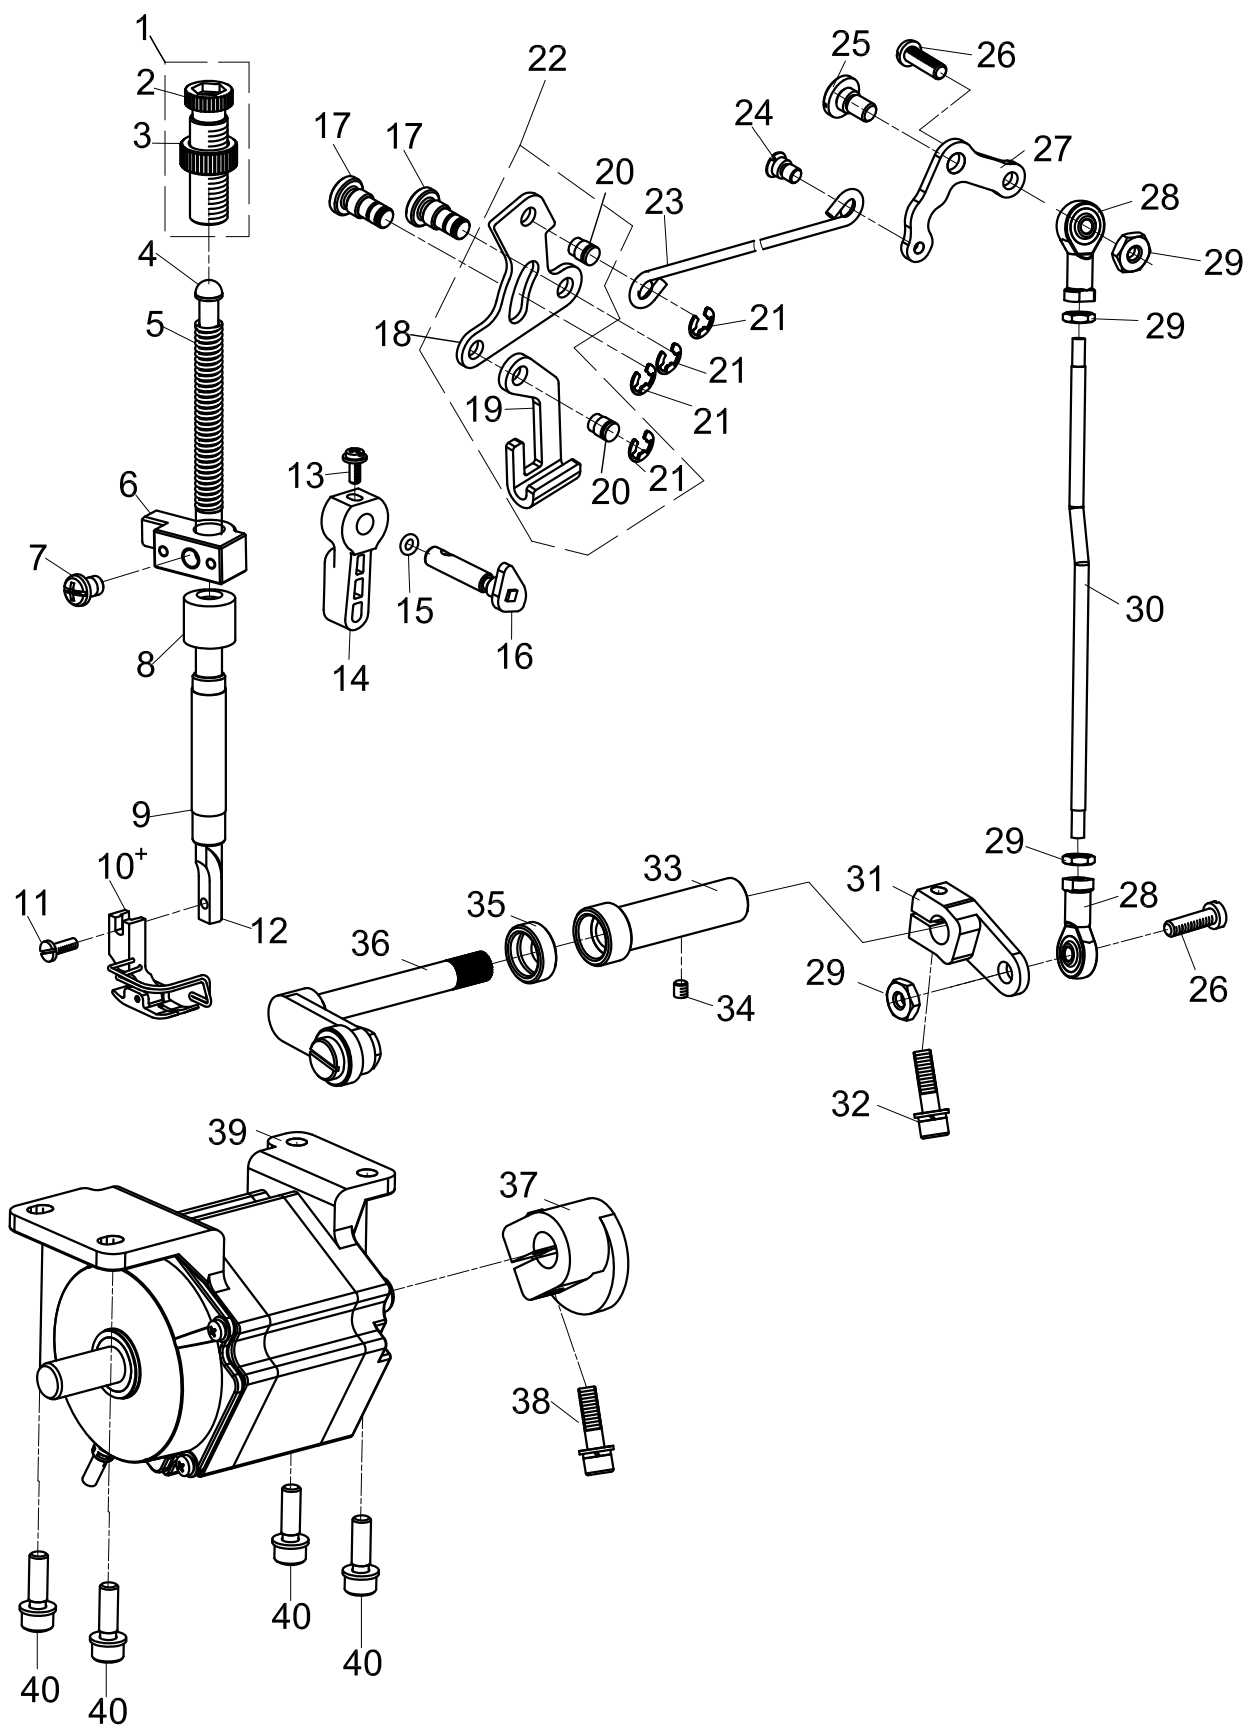


D. 压料、松线分组件/ Presser bar & tension release components

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注
1	10051433	1	调压螺钉组件	SCREW ASM	H
2	10051428	1	螺栓	BOLT SOCKET	
3	10051429	1	螺母	NUT	
4	10004439	1	调压导杆	PRESSER GUIDE BAR	
5	10004473	1	弹簧	SPRING	
6	100001627	1	压杆导架	PRESSER GUIDE BAR BRACKET	
7	100004089	1	螺钉	SCREW	
8	100003533	1	压紧杆防油罩	OIL PROTECTOR COVER	
9	100005915	1	轴套	BEARING SUPPORT	
10+	10052532	1	活压脚部件	PRESSER FOOT ASM	
10+	10005982	1	活压脚部件	PRESSER FOOT ASM	
11	10010650	1	螺钉	SCREW	
12	10010646	1	压杆	PRESSER BAR	
13	10010016	1	螺钉(带垫圈)	SCREW,(S/PWASHER)	
14	10051430	1	压脚扳手	HAND LIFTER	
15	10010027	1	O形圈	O-RING	
16	100001625	1	抬压脚凸块轴	PRESSER FOOT LIFTING BOSS ASSEMBLY	
17	10010653	2	销	PIN	
18	100003238	1	抬压脚前杠杆	FRONT BAR OF PRESSER FOOT	
19	100003237	1	压脚提升板	PRESSER FOOT LIFTING PLATE	
20	10003916	2	销	PIN	
21	10013038	2	挡圈	RETAINING RING	
22	100003599	1	抬压脚前杠杆组件	PRESSER FOOT FRONT LEVER ASSEMBLY	
23	100009667	1	抬压脚拉杆	LIFTING LEVER CONNECTING ROD	
24	10010651	1	轴位螺钉	SHOULDER SCREW	
25	10010652	1	轴位螺钉	SHOULDER SCREW	
26	100008971	2	开槽圆柱头螺钉M5×16	SCREW	
27	100008785	1	抬压脚后杠杆	LIFING LEVER LINK	
28	100008688	2	球头组件	BALL BEARING ASM	
29	10002952	4	螺母	NUTS	
30	100008587	1	抬压脚顶杆	CONNECTING ROD VERRICAL	
31	100008853	1	抬压脚曲柄（螺纹）	LIFT FOOT CRANK	
32	100001396	1	螺栓	BOLT SOCKET, (WASHER)	
33	10014118	1	轴套	BEARING SUPPORT	
34	10012062	1	螺钉	SET SCREW SOCKET	
35	10013029	1	油封	OIL SEAL	
36	100008155	1	抬压脚曲柄B组件	LIFTING FOOT CRANK B ASM.	
37	100008978	1	抬压脚凸轮	LIFTING FOOT CAM	
38	100001396	1	组合螺钉	BOLT SOCKET, (WASHER)	
39	100008362	1	抬压剪线步进电机	STEPPER MOTOR	
40	10065627	4	M5×12组合螺钉	BOLT SOCKET(WASHER)	

E 勾线分组件


Hook of driving shaft components

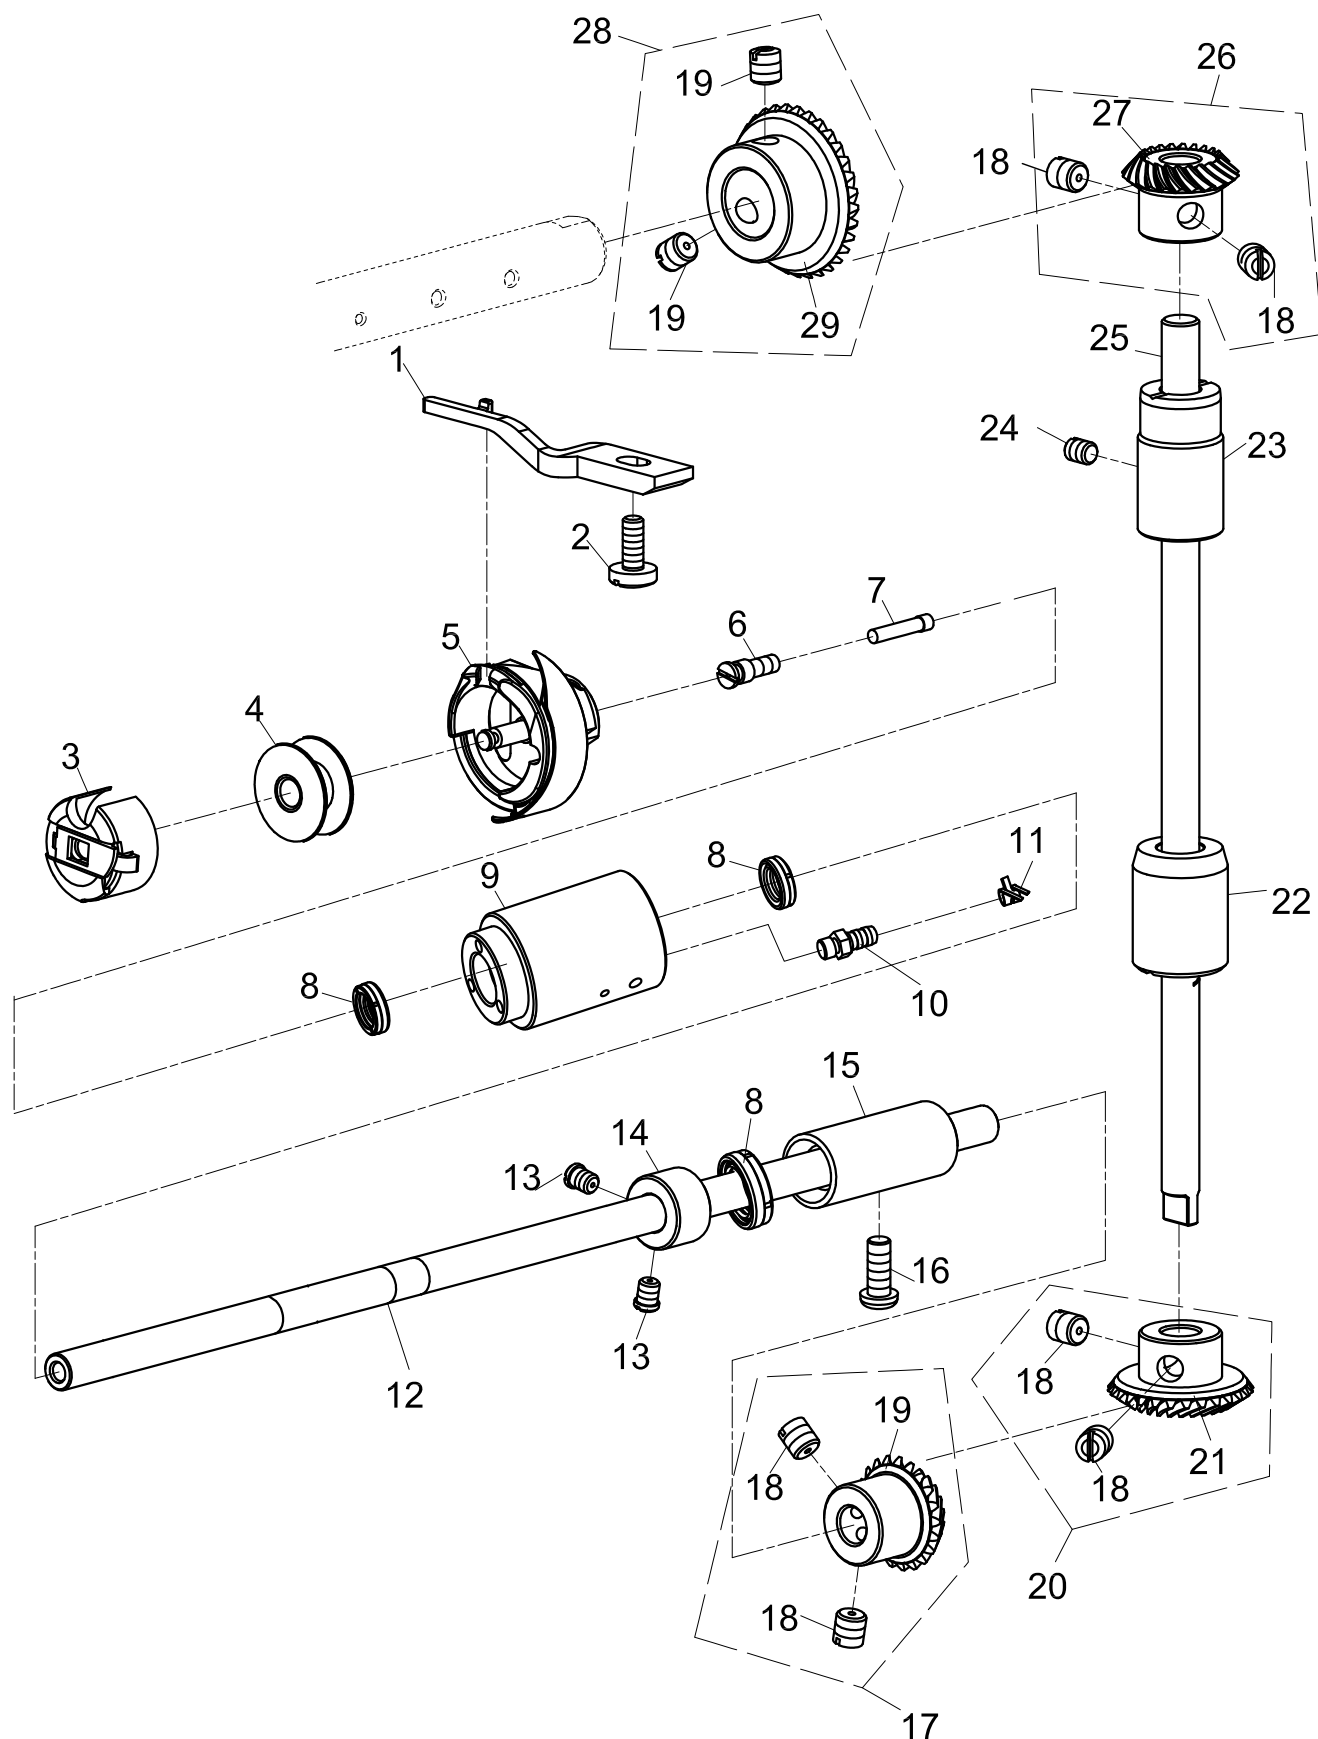

E. 钩线分组件 / Hook of driving shaft components

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注
1	10031261	1	旋梭定位钩	POSITIONING FINGER	H
2	10011101	1	螺钉	SCREW	
3	10056326	1	梭壳	BOBBIN CASE	
4	10025484	1	梭芯	BOBBIN	
5+	10051397	1	旋梭	HOOK	
5+	10053595	1	旋梭	HOOK	
6	100003639	1	螺钉	SCREW	
7	10010063	1	油芯	OIL WICK	
8	10013029	3	油封	OIL SEAL	
9	100002379	1	下轴前套	BEARING SUPPORT	
10	10008779	2	油管接头	TUBING JOINT	
11	10012160	2	弹簧	SPRING	
12	100008631	1	下轴	HOOK DRIVING SHAFT	
13	10010059	2	螺钉	SET SCREW SOCKET	
14	10010058	1	下轴挡圈	THRUST COLLAR	
15	100007268	1	轴套	BEARING SUPPORT	
16	10010030	1	螺钉	SCREW	
17	10010029	1	齿轮组件	GEAR ASSY	
18	10010065	8	螺钉	SET SCREW SOCKET	
19	10003937	1	齿轮	BEVEL GEAR	
20	10010029	1	齿轮组件	GEAR ASSY	
21	10010029	1	齿轮	BEVEL GEAR	
22	100008205	1	竖轴下套	BEARING SUPPORT	
23	10007236	1	轴套	BEARING SUPPORT	
24	10041529	1	螺钉	SET SCREW SOCKET	
25	10010057	1	竖轴	BEARING SUPPORT	
26	10002561	1	齿轮组件	GEAR ASSY	
27	10010062	1	齿轮	BEVEL GEAR	
28	10002445	1	齿轮组件	GEAR ASSY	
29	10010056	1	齿轮	BEVEL GEAR	

F 送料分组件 Feed mechanism components

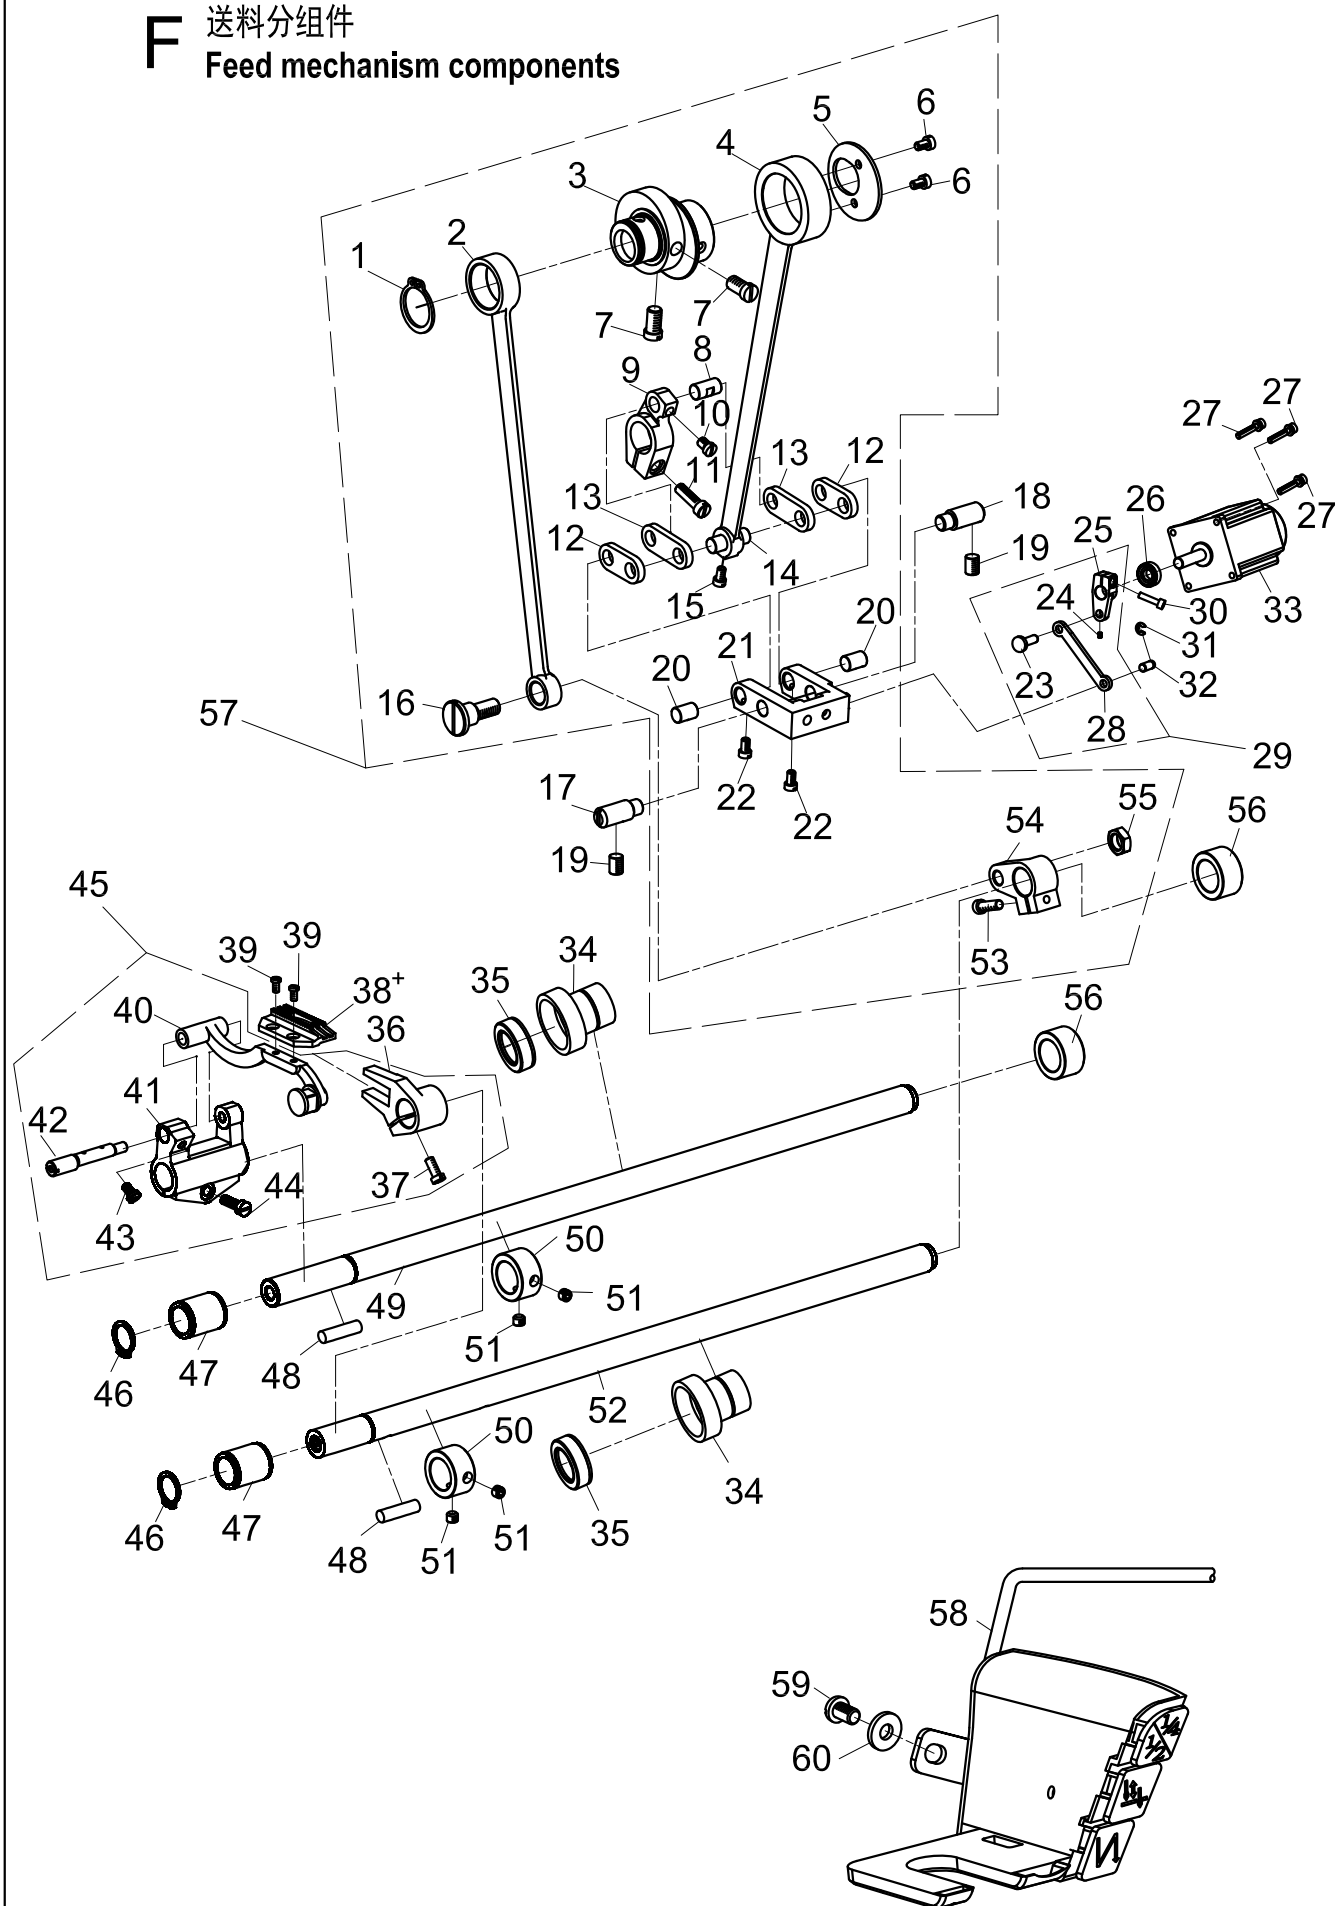


F. 送料分组件 / Feed mechanism components

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注
1	10010090	1	挡圈	RETAINING RING	H
2	10010084	1	抬牙连杆	CONNECTING ROD	
3	10010115	1	送料偏心轮	FEED DRIVE ECCENTRIC CAM	
4	10010072	1	送料连杆	CONNECTING ROD	
5	10010098	1	送料偏心轮盖板	THRUST COVER	
6	10010643	2	螺钉	SCREW	
7	10010092	2	螺钉	SCREW	
8	10010096	1	销	PIN	
9	10010076	1	送布曲柄	FEED ROCKER	
10	10010071	1	螺钉	SCREW	
11	10010095	1	螺钉	SCREW	
12	10010075	2	送料短摆动板	SHORT LINK	
13	10010068	2	送料长摆动板	LONG LINK	
14	10010069	1	销	PIN	
15	10010071	1	螺钉	SCREW	
16	10010091	1	轴位螺钉	SHOULDER SCREW	
17	100001677	1	送料摆动板座左销	PIN	
18	100001671	1	送料摆动板座右销	PIN	
19	10010678	2	螺钉	SET SCREW SOCKET	
20	10010087	2	销	PIN	
21	100005409	1	送料摆动板座	FEED ADJUSTING	
22	10010071	2	螺钉	SCREW	
23	100007717	1	销	PIN	
24	100007786	2	内六角紧定螺钉	SET SCREW SOCKET	
25	100007723	1	针距曲柄	CRANK	
26	100001355	1	油封	OIL SEAL	
27	10065628	3	组合螺钉	SCREW	
28	100007722	1	针距连杆	CONNECTING ROD	
29	100007787	1	倒缝针迹组件	REVERSE STITCH ASSEMBLY	
30	10065628	1	螺栓	BOLT SOCKET	
31	10010649	1	挡圈	SNAP RING	
32	100007717	1	销	PIN	
33	100007727	1	倒缝步进电机	STEPPER MOTOR	
34	100010335	2	送料抬牙轴中套	BEARING SUPPORT	
35	100001355	2	油封	OIL SEAL	
36	10042079	1	抬牙叉形曲柄组件	LIFING FORK	
37	10004628	1	螺钉	SCREW	
38+	10052531	1	送料牙	FEED DOG	
38+	10007322	1	送料牙	FEED DOG	
39	10010099	2	螺钉	SCREW	
40	100005713	1	牙架	TOOTH BASE	
41	10004474	1	牙架座	FEED BAR DRIVING CRANK	
42	10004440	1	销	PIN	
43	10010074	1	螺钉	SCREW	
44	10004993	1	螺钉	SCREW	
45	100002261	1	牙架组件	DENTURE ASSEMBLY	
46	10010090	2	挡圈	RETAINING RING	
47	10014116	2	轴套	BEARING SUPPORT	
48	100002613	2	毛毡	FELT	
49	100008676	1	送料轴	FEED ROCKER SHAFT	
50	10010542	2	挡圈	SNAP RING	
51	10038073	4	螺钉	SET SCREW SOCKET	
52	100008674	1	抬牙轴	FEED LIFTING ROCKER SHAFT	
53	10010095	1	螺钉	SCREW	
54	10010086	1	抬牙后曲柄	LIFING ROCKER	
55	10004475	1	螺母	NUT	
56	100008154	2	抬牙送布后套	BEARING SUPPORT	
57	100005696	1	抬牙送料机构组件	FEED MECHANISM ASSEMBLY	
58	100004163	1	机头灯	HEADLAMP ASSEMBLY	
59	10008934	1	螺钉	SCREW	
60	10011168	1	垫圈	WASHER	

H 剪线分组件

Thread trimmer components

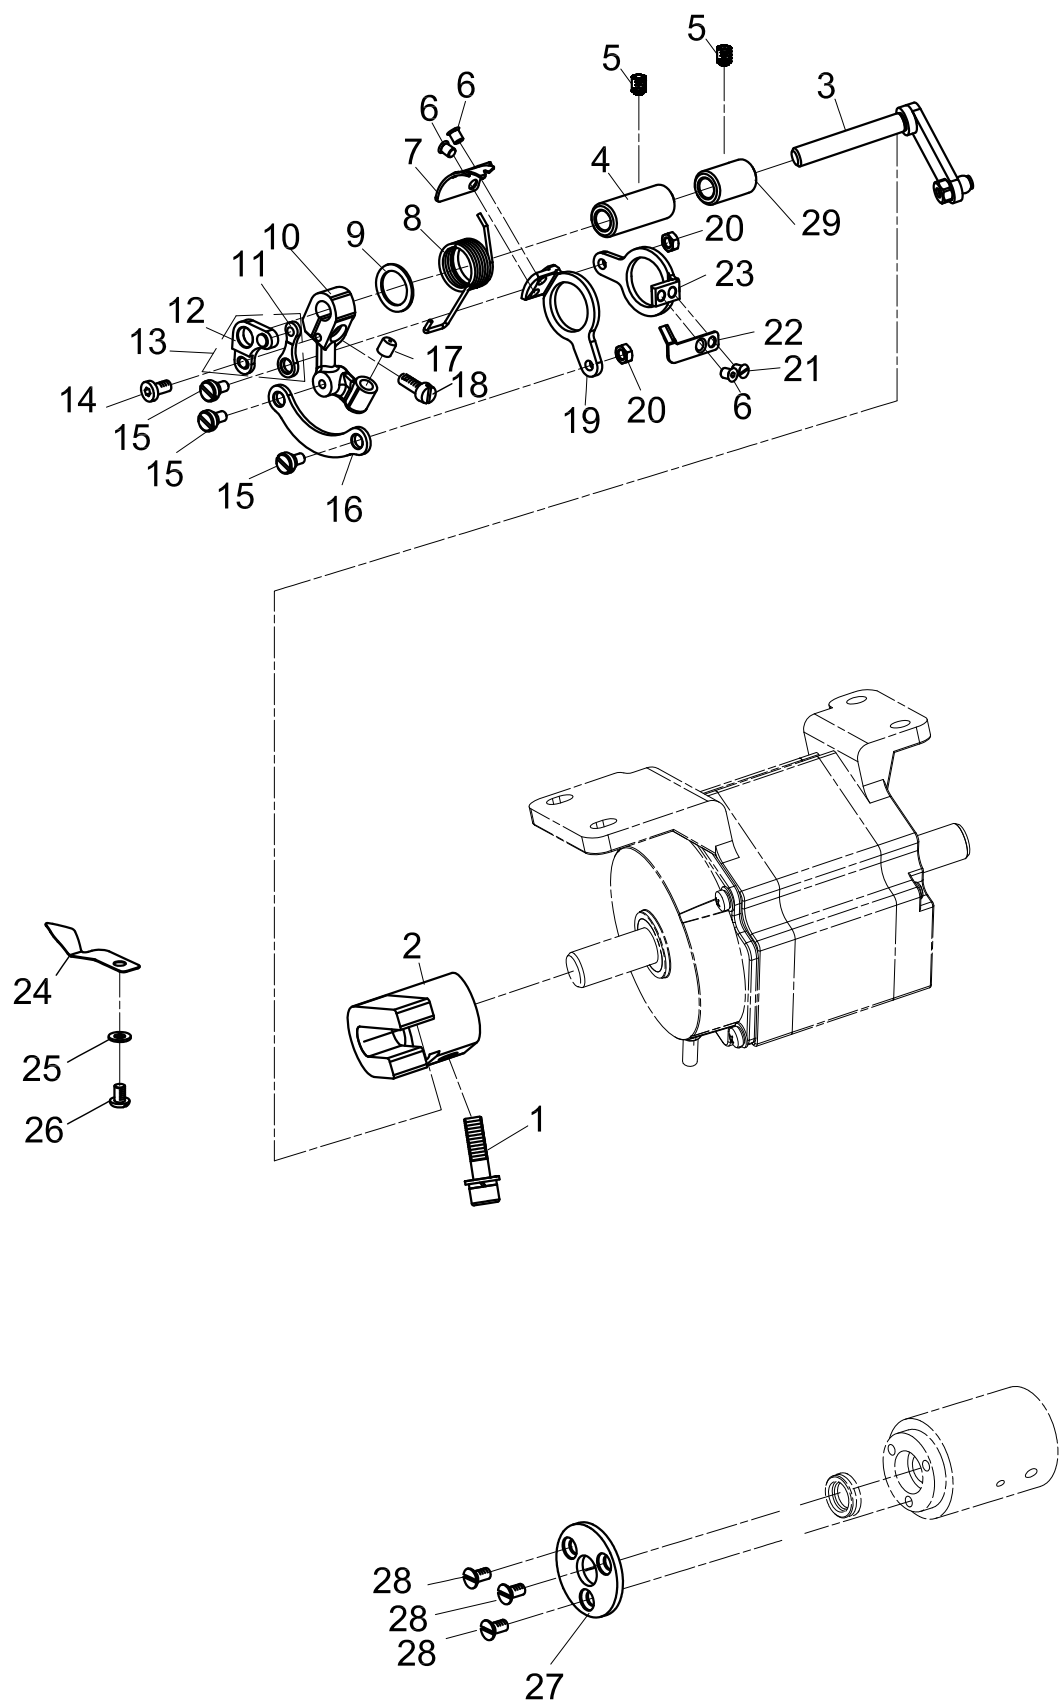


H. 剪线分组件 / Thread trimmer components

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注
1	100001396	1	螺栓	BOLT SOCKET, (WASHER)	
2	100007713	1	剪线叉形曲柄	TRIMMER FORK CRANK	
3	100008707	1	剪线驱动曲柄组件	SHEAR LINE DRIVE CRANK ASSEMBLY	
4	10012454	1	轴套	SHORT BUSHING	
5	10012062	2	螺钉	SET SCREW SOCKET	
6	10011588	3	紧固螺钉	FASTENING SCREW	
7	100001662	1	上动刀	ROUND KNIFE	
8	10011649	1	弹簧	SPRING	
9	10008865	1	垫圈	WASHER	
10	10064327	1	切线驱动曲柄	TRIMMING CRANK	
11	100008377	1	定刀连杆	CONNECTING ROD	
12	100008376	1	定刀调节板	ADJUSTING PLATE	
13	200002574	1	下刀架组件	SETTING KNIFE ADJUSTING ASM	
14	10006624	1	螺栓	BOLT SOCKET	
15	10011514	3	轴位螺钉	SHOULDER SCREW	
16	10031612	1	刀轴连杆	KNIFE SHAFT CRACK ROD	
17	10011580	1	切刀驱动曲柄止动块	BLOCK	
18	10008863	1	螺钉	SCRUEW	
19	10064330	1	动刀架	ROUND KNIFE BRACKET	
20	10011578	2	螺母	NUT	
21	100003931	1	螺钉	SCREW	
22	100001660	1	下动刀	ROUND KNIFE	
23	10064331	1	定刀架	FIXED TURRET	
24	10060697	1	分线器	DISPART	
25	10013154	1	垫圈	WASHER	
26	10014474	1	螺钉	SCREW	
27	10013026	1	刀架压板	TOOL HOLDER CLAMP	
28	10009626	3	螺钉	SCREW	
29	100008686	1	轴套	SHORT BUSHING	

润滑分组件


Lubrication components

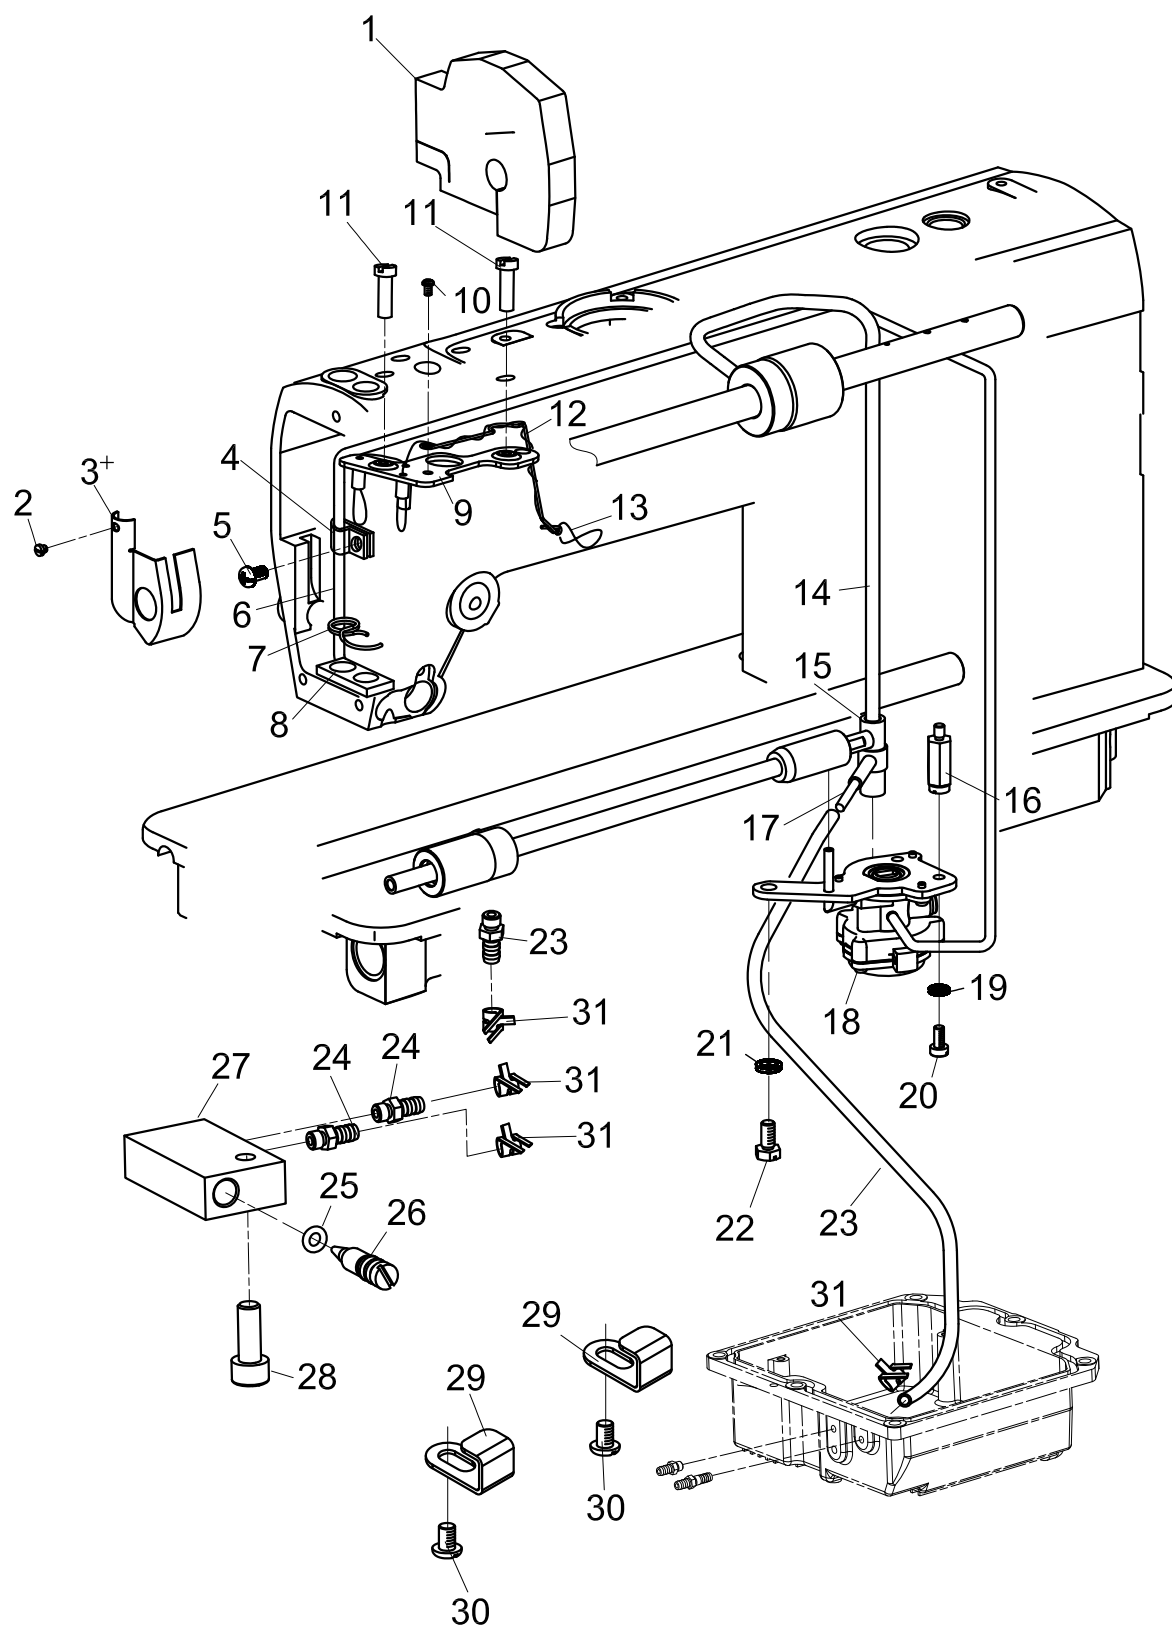

I. 润滑分组件 / Lubrication components

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注
1	10014197	1	挡油海绵	FOAM RUBBER	
2	10005558	1	螺钉	SCREW	
3	100002229	1	面部防油板部件	OIL STOPER	
4	10041628	1	油管夹	OIL FELT PRESER	
5	10008934	1	螺钉	SCREW	
6	200006972	1	回油管组件	OIL RETURN PIPE ASSEMBLY	
7	10010294	1	毛毡夹	FELT CLIP	
8	10054207	1	羊毛毡	FELT	
9	100008160	1	油线架	OIL WIRE RACK	
10	10000040	1	螺钉	SCREW	
11	10001368	2	螺钉	SCREW	
12	100008159	1	油线固定簧	OIL LINE FIXING SPRING	
13	10008067	1	油线	OIL LINES	
14	10065712	1	油管	MAIN SHAFT OIL TUBE	
15	100003443	1	供油管接头	OIL TUBE HOLDER	
16	10010293	1	油泵连接螺柱	SCREW	
17	100001635	1	铝管接头	ALUMINUM PIPE JOINT	
18	100009002	1	油泵部件	OIL PUMP	
19	10003077	1	弹簧垫圈	WASHER SPRING	
20	10010066	1	螺钉	SCREW	
21	10003077	1	弹簧垫圈	WASHER SPRING	
22	10050422	1	六角螺栓	BOLT	
23	100003617	1	3.5×6油管	TUBE	
24	10008779	3	油管接头	OIL TUBE HOLDER	
25	10010027	1	O形圈	O-RING	
26	10000566	1	油量调节杆	OIL REGULATING LEVER	
27	100002561	1	油量调节阀	OIL CONTROL VALVE	
28	100004134	1	螺栓	BOLT SOCKET	
29	100003696	2	电线固定架	CORD HOLDER	
30	10010899	2	螺钉	SCREW	
31	10012160	4	弹簧	SPRING	

J 油盘、膝抬压脚分组件 **Presser foot components of oil plate knee lift**

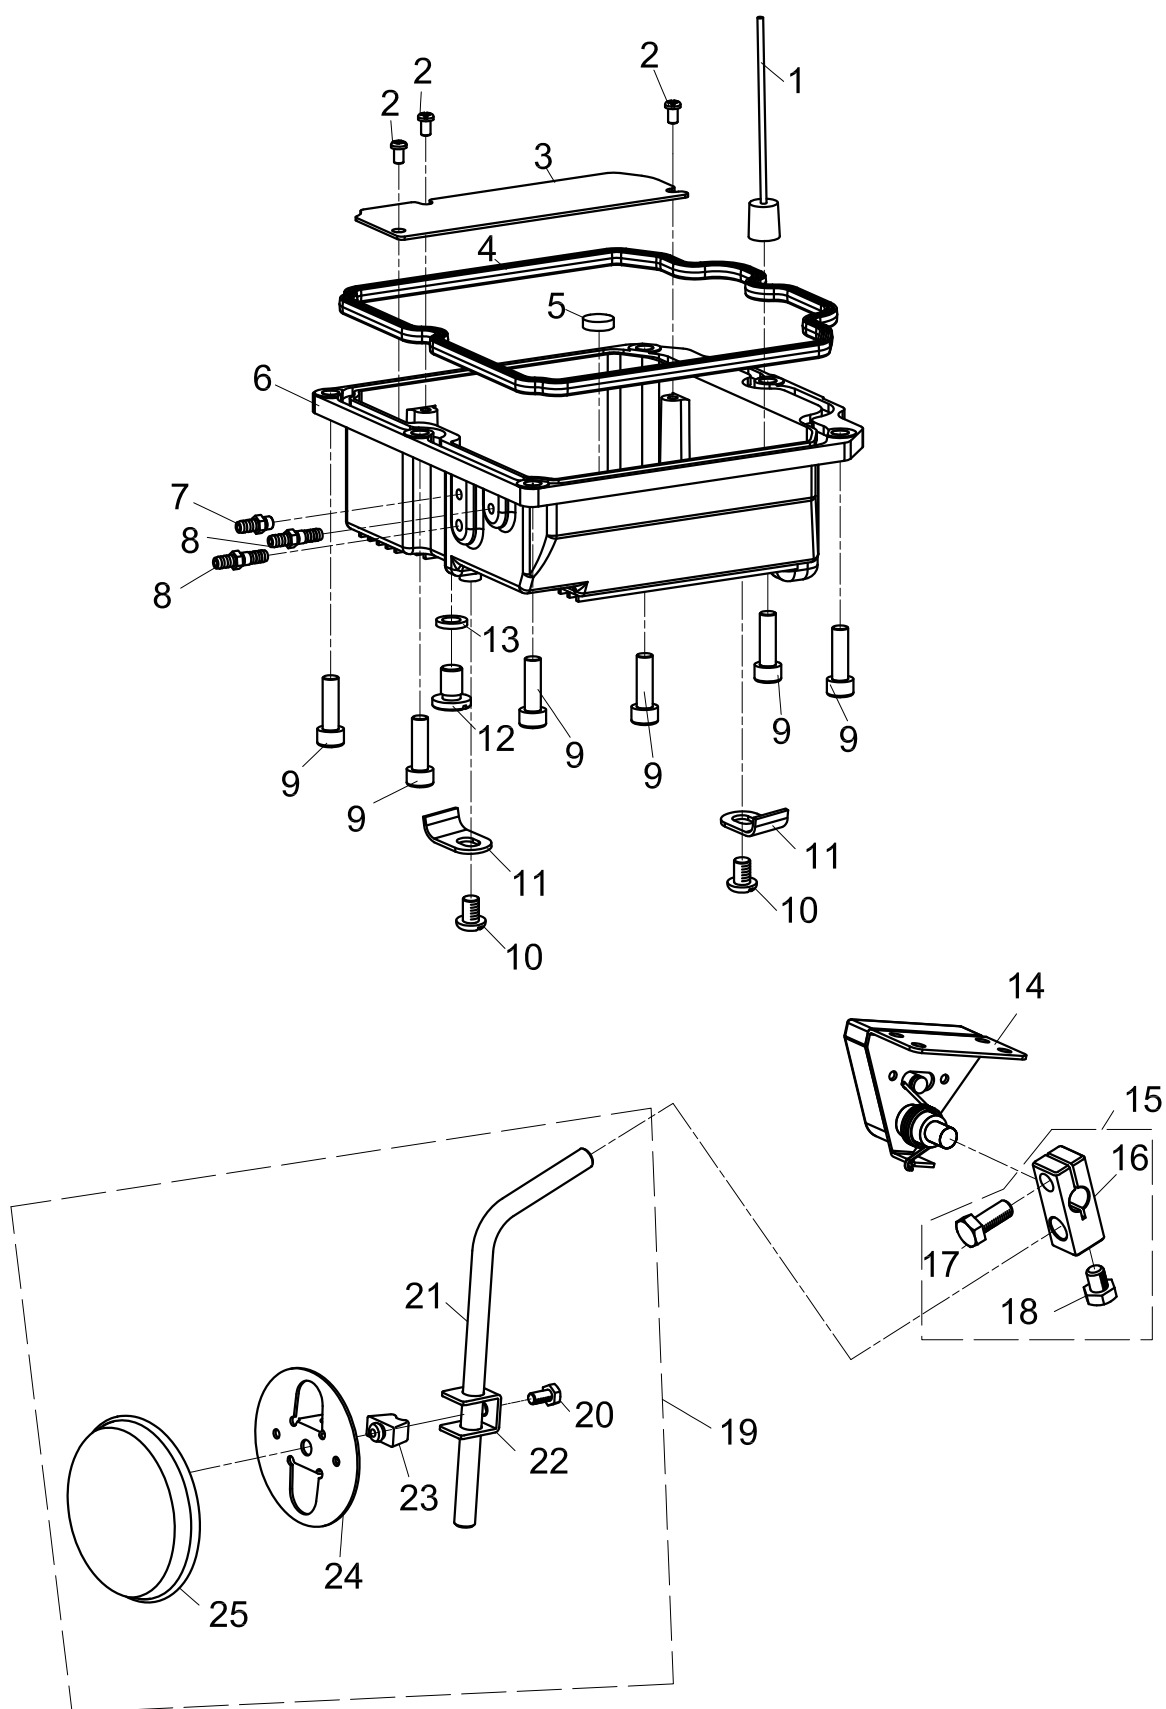


J. 油盘、膝抬压脚分组件 / Presser foot components of oil plate knee lift

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注
1	100009063	1	油标组件	BUOY	
2	10010074	3	螺钉	SCREW	
3	100007736	1	挡油板	OIL BAFFLE	
4	100007658	1	油盘密封垫	OIL RESERVOIR GASKET	
5	10001096	1	油盘磁铁	OIL RESERVOIR MAGNET	
6	100011554	1	铝油盘	OIL RESERVOIR	
7	10008779	1	油管接头	OIL TUBE HOLDER	
8	100011855	1	供油嘴	OIL SUPPLY NOZZLE	
9	10002028	6	螺栓	BOLT SOCKET	
10	10013128	2	螺钉	SCREW	
11	10029991	2	电线压板	WIRE PLATEN	
12	100002181	1	放油螺钉	SCREW	
13	10014461	1	O形圈	O-RING	
14	100007968	1	电子膝靠部件	ELECTRONIC KNEE RECLINER	
15	10002562	1	抬压脚操纵杆接头组件	BUBBER RING	
16	10003896	1	抬压脚操纵接头	BRACKET ASM	
17	10002613	1	六角螺栓	BOLT	
18	10002610	1	六角螺栓	BOLT	
19	100004426	1	操纵杆部件	KNEE PRESSING PLATE ASM	
20	10003894	1	六角螺栓	BOLT	
21	10003901	1	操纵杆	KNEE PRESSING PLATE ROD	
22	10003897	1	操纵杆接头	KNEE PRESSING PLATE HOLDER	
23	100003445	1	操纵杆垫	KNEE PRESSING PLATE RUBBER	
24	10003891	1	操纵板	KNEE PRESSING PLATE	
25	100003446	1	操纵板软垫	KNEE PRESSING COVER	

K 过线架分组件


Components of thread-running stand

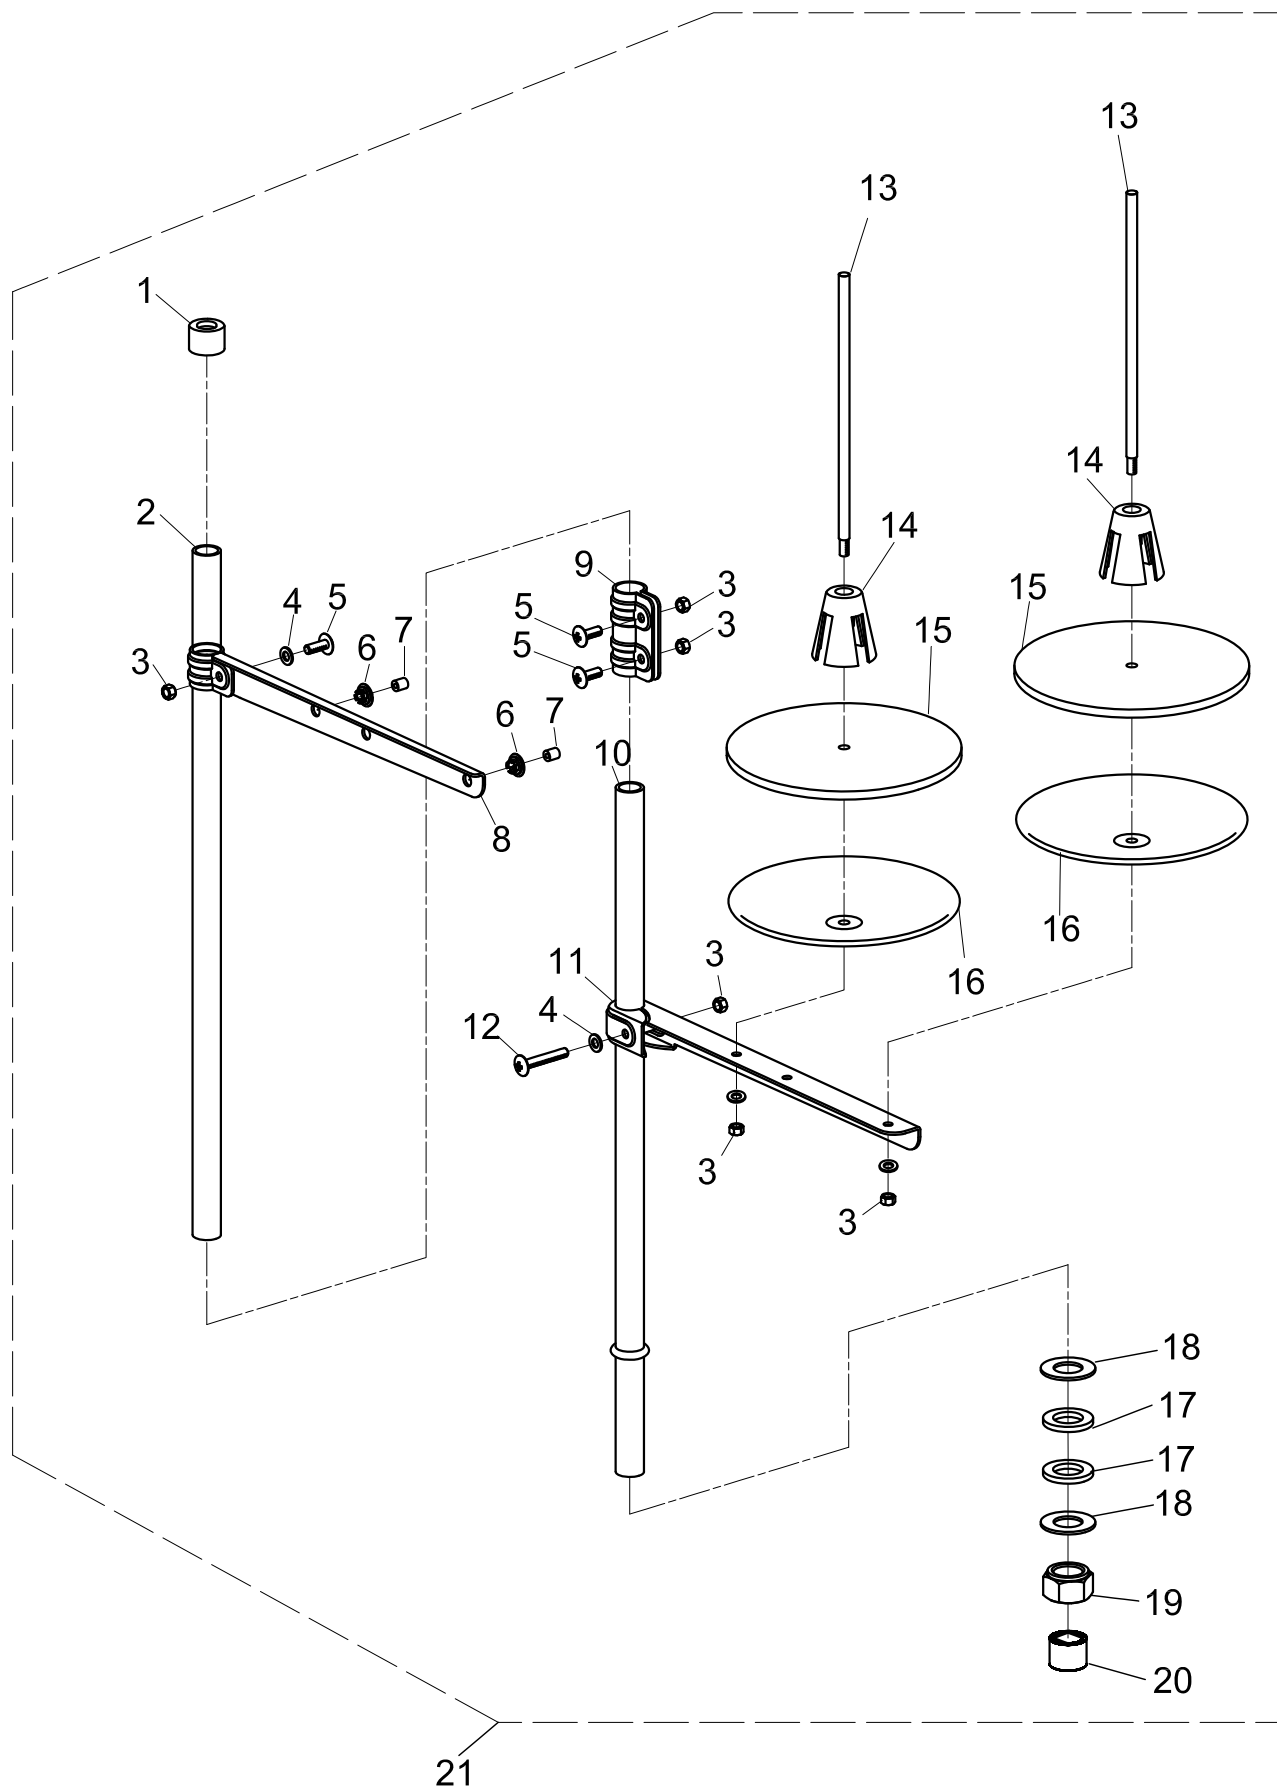

K. 过线架分组件 / Components of thread-running stand

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注
1	100003447	1	线架上撑管套	COLUMN CAP	
2	10004293	1	线架上撑管	COLUMN PIPE(UPPER)	
3	10002953	6	螺母	NUT	
4	10003022	4	垫圈	WASHER	
5	10003301	3	螺钉	SCREW	
6	10004285	4	过线管套	THREAD GUIDE BUSHING	
7	10004289	4	过线管	THREAD GUIDE PIPE	
8	10004298	2	上过线架	THREAD HANGER(UPPER)	
9	10004286	1	撑管夹	COLUMN PIPE CONNECTOR	
10	10004291	1	线架下撑管	COLUMN PIPE(LOWER)	
11	10004284	1	下过线架	THREAD HANGER(LOWER)	
12	10003312	2	螺钉	SCREW	
13	10004288	2	线轴	SPOOL PIN	
14	10004287	2	线盘塑料压块	SPOOL CUSHION	
15	10004281	2	线盘软垫	SPOOL MAT	
16	10004299	2	线盘	SPOOL SEAT DISC	
17	10004295	2	垫圈	WASHER	
18	10004290	2	垫圈	WASHER	
19	10002985	1	螺母	NUT	
20	100003447	1	线架上撑管套	COLUMN PIPE(UPPER)	
21	100003519	1	二线线架部件	WIRE FRAME COMPONENTS	

附件
Accessories

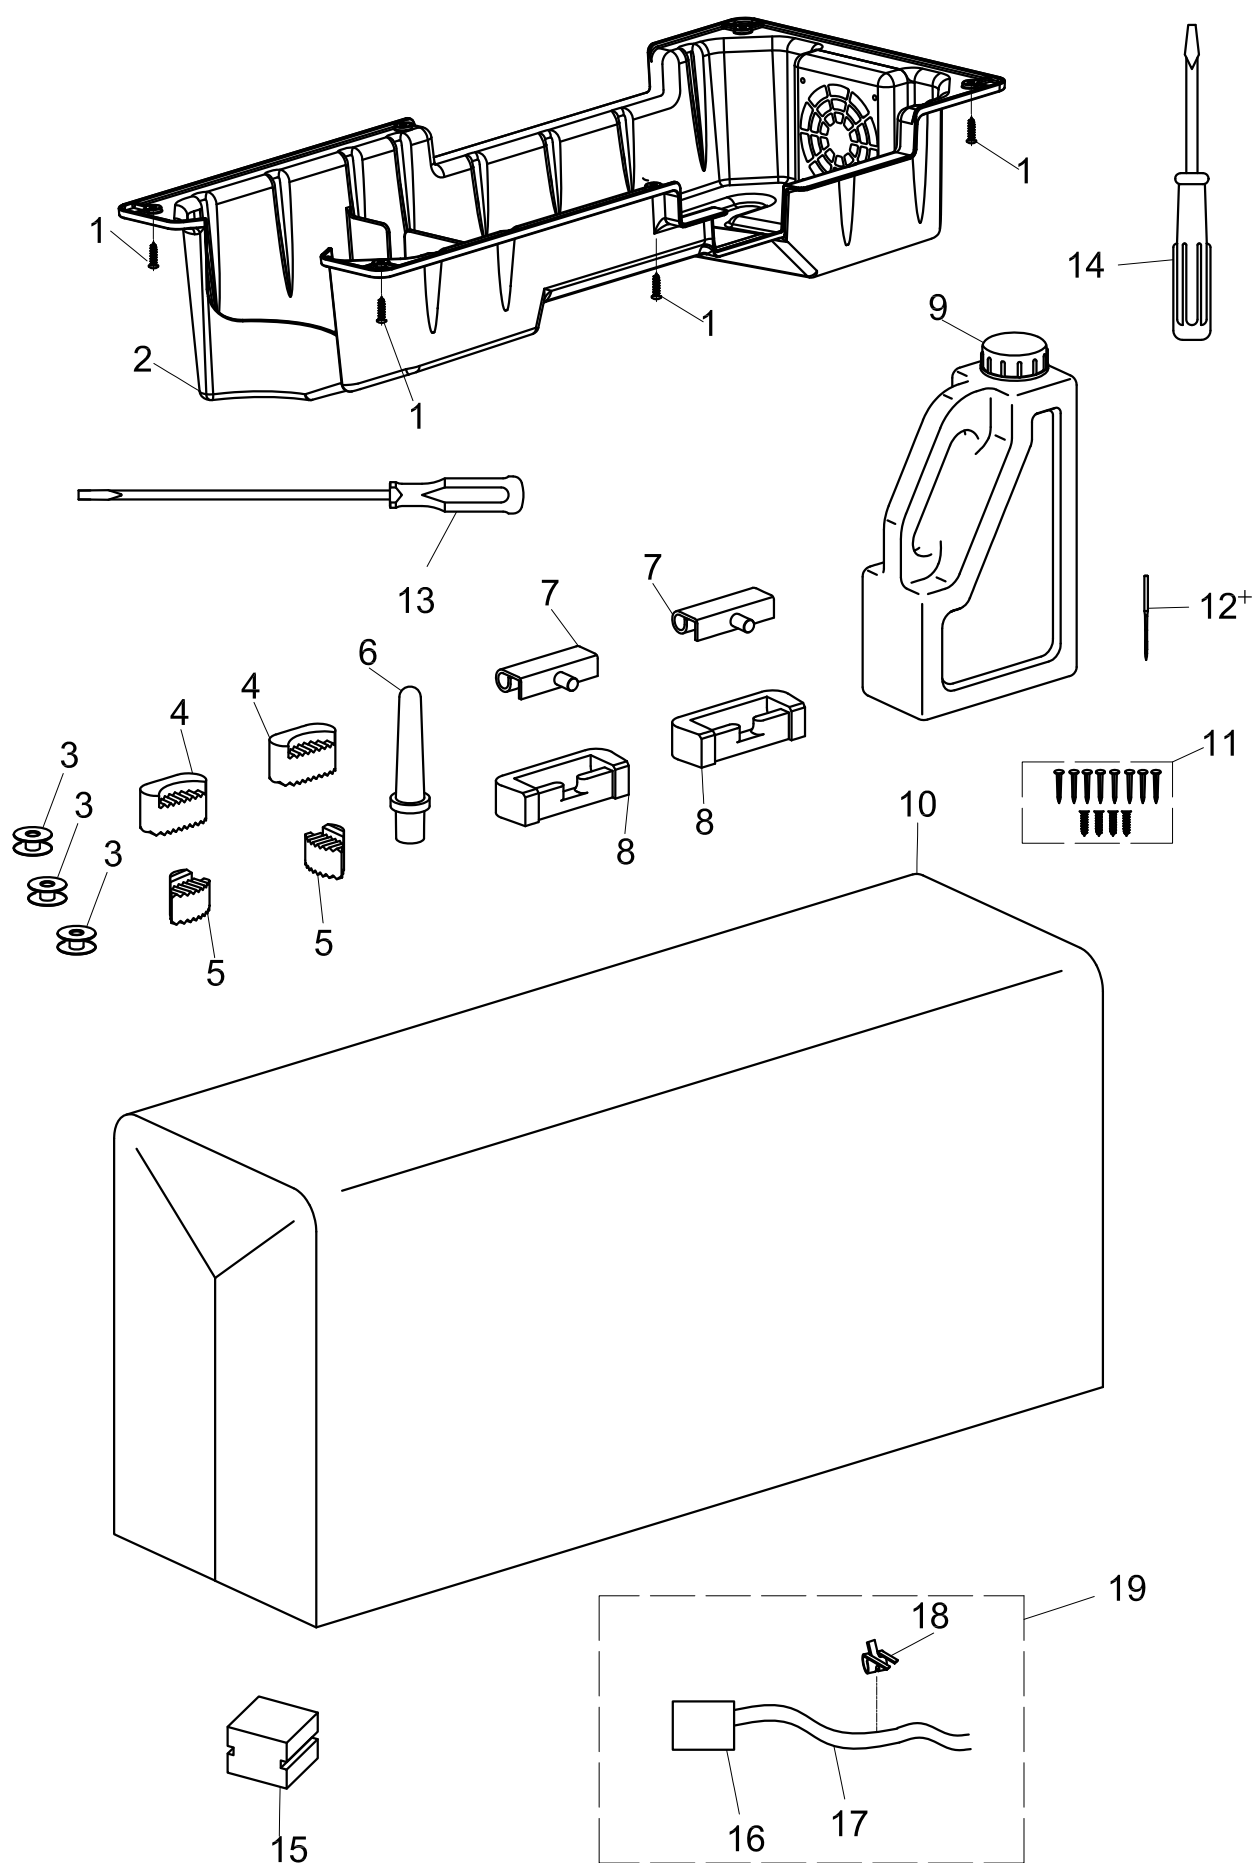


L. 附件 / Accessories

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注
1	100003969	6	木螺钉	WOOD SCREW	H
2	100008830	1	塑料油盘	PLASTIC OIL PAN	
3	10025484	3	梭芯	BOBBIN	
4	100004173	2	机头油盘座垫	OIL RESERVOIR CUSHION	
5	100004172	2	油盘支座	OIL RESERVOIR SEAT	
6	10026033	1	机头支柱	FRAME SUPPORT BAR	
7	10004466	2	机头连接钩部件	HEAD CONNECTING HOOK	
8	100004174	2	机头连接钩座	HEAD CONNECTING HOOK SOCKET	
9	10060866	1	油壶	OIL POT	
10	100011952	1	机头罩	HEAD COVER	
11	10031426	1	螺钉组件	SCREW	
12+	10034916	4	DB×5 18#机针	NEEDLE DB×5 18#	
12+	10034917	4	DP×1 14#机针	NEEDLE DP×1 14#	
13	10010994	1	大螺丝刀	BIG SCREWDRIVER	
14	10013185	1	小螺丝刀	SMALL SCREWDRIVER	
15	100008331	1	油管夹块	TUBING CLAMP BLOCK	
16	10043559	1	回油管滤油毡	FELT	
17	100003617	1	油管	OIL FELT	
18	10041628	1	油管夹	TUBING CLAMP	
19	200006251	1	回油管组件	TUBING COMPONENT	

M 电控分组件

Driver-by-wire Components

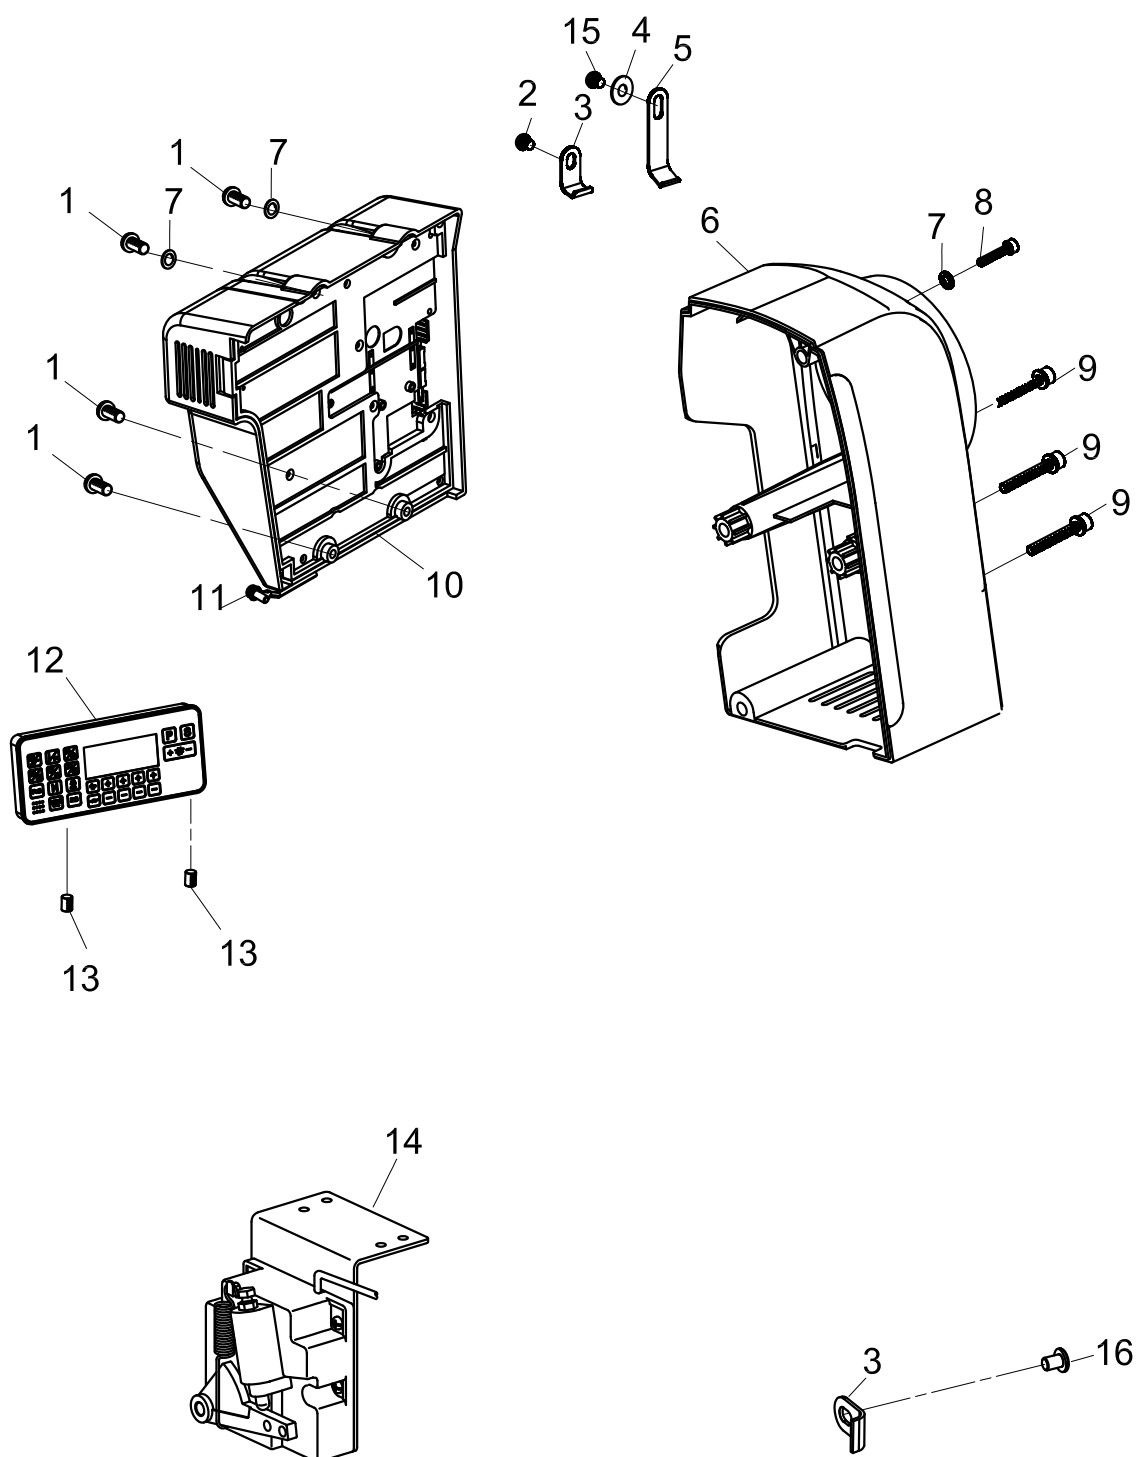

M. 电控分组件 / Drive-by-wire Components

参照号	零部件序号	数量	零部件名称	NAME OF PARTS	备注
1	10054287	4	螺钉	SCREW	
2	10010899	1	螺钉	SCREW	
3	100002462	2	电线夹	CORD HOLDER	
4	10000480	1	垫圈	WASHER	
5	100002463	1	电线夹	CORD HOLDER	
6	100009908	1	马达外罩	MOTOR HOUSING	
7	10006115	3	垫圈	SNAP RING	
8	10012080	1	螺栓	BOLT SOCKET	
9	10001943	3	螺栓(带垫圈)	BOLT SOCKET(WASHER)	
10	100009909	1	电控	CONTROL BOX	
11	100008874	1	螺栓	BOLT SOCKET	
12	100009910	1	操作屏	KEY SCREEN	
13	100004088	2	螺钉	SET SCREW SOCKET	
15	10008934	1	螺钉	SET SCREW SOCKET	
16	10013128	1	螺钉	SCREW	